
CROP DIVIDER

INSTALLATION MANUAL

JD SPRAYER MOUNT 4730

FREEFORM PLASTICS

BOX 159, ST. BRIEUX, SK CANADA
S0K 3V0

P: 1-306-275-2155

F: 1-306-275-2101

EMAIL: SALES@FREEFORMPLASTICS.COM

WEB SITE: WWW.FREEFORMPLASTICS.COM

NOTES

- LOCTITE ALL FASTENERS THAT ARE NOT SELF LOCKING
- ONLY RIGHT SIDE SHOWN

TOOLS REQUIRED


- RED LOCTITE
- 1-1/16" WRENCH AND SOCKET

INSTALLATION INSTRUCTIONS

1. FASTEN MOUNT TO SPRAYER
- FASTEN DIVIDER MOUNT WELDMENT TO AXLE USING THE FOLLOWING FASTENERS:
 - 1010-20 BOLT 5\8X2 UNC GR5 PLD QTY 4
 - 1206-07 NUT PTRQ TL 5\8 UNC GR B ZDW QTY 4
 - 1325-33 WSHR 5\8 SAE PLD QTY 8



2. REPEAT FOR LEFT SIDE ASSEMBLY

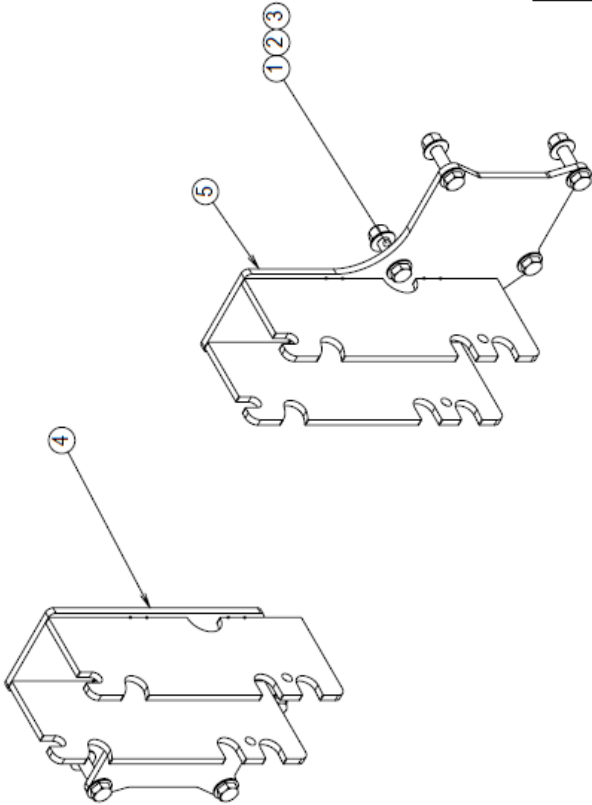

ITEM #	PART #	DESCRIPTION	QTY.
1	1010-20	BOLT 5/8X2 UNC GR5 PLD	8
2	1206-07	NUT PTRQ TL 5/8 UNC GR B ZDW	8
3	1325-33	WSHR 5/8 SAE PLD	16
4	26008-40-01	JD RH DIVIDER MT	1
5	26008-40-02	JD LH DIVIDER MT	1
6	26008-40-99	MANUAL SPRAYER JD 26008-40	1

TOLERANCES UNLESS OTHERWISE SPECIFIED:

ANGLES ±1° FRACTIONS ± 1/16"

DECIMALS FRACTIONAL HOLES:

XX ± .01"

XXX ± .005"

A: +0.02", -0.010"

B: +0.150", -0.010"



REV	DATE	DESCRIPTION
0	09-Mar-21	COMPLETED DRAWING

NCB	DKH	DATE	DRN BY	SCALE	SIZE	PAGE
CB	BY	26008-40	09-MAR-21	DKH	1:8	A

1 OF 1

COLOR

NONE

THE INFORMATION CONTAINED IN THIS DOCUMENT IS THE SOLE PROPERTY OF BOURGALT INDUSTRIES LTD. USE SHALL BE LIMITED TO THE PURPOSES FOR WHICH THE INFORMATION HAS BEEN PROVIDED. ANY REPRODUCTION OR DISCLOSURE TO THIRD PARTIES, IN WHOLE OR PART, WITHOUT THE WRITTEN PERMISSION OF BOURGALT INDUSTRIES LTD. IS PROHIBITED.