
CROP DIVIDER

INSTALLATION MANUAL

NH SPRAYER MOUNT SP400F

FREEFORM PLASTICS

BOX 159, ST. BRIEUX, SK CANADA
S0K 3V0

P: 1-306-275-2155

F: 1-306-275-2101

EMAIL: SALES@FREEFORMPLASTICS.COM

WEB SITE: WWW.FREEFORMPLASTICS.COM

NOTES

- LOCTITE ALL FASTENERS THAT ARE NOT SELF LOCKING
- ONLY RIGHT SIDE SHOWN

TOOLS REQUIRED


- RED LOCTITE
- WRENCH AND SOCKET

INSTALLATION INSTRUCTIONS

1. FASTEN MOUNT TO SPRAYER
- FASTEN DIVIDER MOUNT WELDMENT TO AXLE USING THE FOLLOWING FASTENERS:
 - 1102-50 BOLT CRG 1\2X2 UNC GR5 PLD QTY 2
 - 1204-05 NUT PTRQ PLD 1\2 UNC GR B ZDW QTY 2
- TORQUE TO MACHINE SPECIFICATIONS.



2. REPEAT FOR LEFT SIDE ASSEMBLY

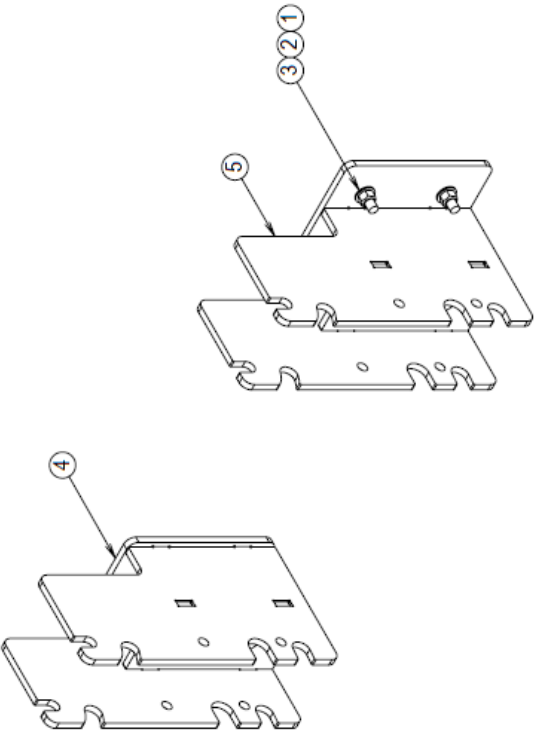

ITEM #	PART #	DESCRIPTION	QTY.
1	1102-50	BOLT CRG 1/2X2 UNC GR5 PLD	4
2	1204-05	NUT PTRQ PLD 1/2 UNC GR B ZDW	4
3	1325-27	WSHR 1/2 SAE PLD	4
4	26008-50-01	NH RH DIVIDER MT	1
5	26008-50-02	NH LH DIVIDER MT	1

TOLERANCES UNLESS OTHERWISE SPECIFIED:

ANGLES $\pm 1^\circ$ FRACTIONS $\pm 1/16"$

DECIMALS FRACTIONAL HOLES:

XX $\pm .01"$ A: $+0.020, -0.010"$

XXX $\pm .005"$ B: $+0.150, -0.010"$



REV	DATE	DESCRIPTION
0	10-Mar-21	COMPLETED DRAWING

DATE	DRN BY	DKH	SCALE	SIZE	PAGE
10-MAR-21			1:8	A	1 OF 1

DOCUMENT NO.	WEIGHT	COLOR
26008-50	67.2 LB	NONE

FREEFORM PLASTICS

ST. BRIEUX, SASKATCHEWAN CANADA S9K 3V0

NH MOUNT PAIR SP400F

THE INFORMATION CONTAINED IN THIS DOCUMENT IS THE SOLE PROPERTY OF BOURGault INDUSTRIES LTD. USE SHALL BE LIMITED TO THE PURPOSES FOR WHICH THE INFORMATION HAS BEEN PROVIDED. ANY REPRODUCTION OR DISCLOSURE TO THIRD PARTIES, IN WHOLE OR IN PART, WITHOUT THE WRITTEN PERMISSION OF BOURGault INDUSTRIES LTD. IS PROHIBITED.